



NOTES

1. Downpipe items shown on this page are not furnished by K.E.C. are shown as a guide to proper installation only. Selection of items, specifications and installation thereof remains the responsibility of the shipbuilder/installer and shall be in compliance with regulations of the USCG and/or other applicable regulatory bodies.
2. Installation methods 1, 2 and 3 are located in adjoining area near bottom of vessel. Methods 1 & 2 are preferred where practical.
3. Installation method 4 is located on the top of tank. Gate valve is optional for tank top downpipe installation.
4. Exact dimension "D" must be furnished to K.E.C. before a calibrated scale can be furnished for indicator. This dimension, if specified, is noted below:

D =

5. Downpipe and tubing must slope downward toward tank. This will prevent siphoning and ensure positive drainage in the event of loss of compressed air within the system.

METHODS OF DOWNPIPE INSTALLATION

(ITEMS SHOWN ARE NOT SUPPLIED)

INSTALLATION INSTRUCTIONS

**Marine Tank Level Gauging Systems
Typical Downpipe Installation**

		DATE	12-8-97
		DRAWN BY	MS Dept
A	12/3/97	Released	APPROVED <i>[Signature]</i>

 KING ENGINEERING CORPORATION Box 1226, Ann Arbor, MI 48106-1228 U.S.A.	DWG. NO.	E-4448-8
	SHEET 1 OF 1	A