





GAUGE READING POSITION
(AIR SUPPLY NOT CLOSED)

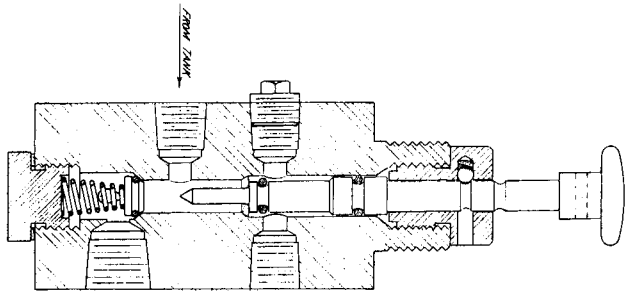

NEUTRAL POSITION
(ALL PORTS CLOSED)

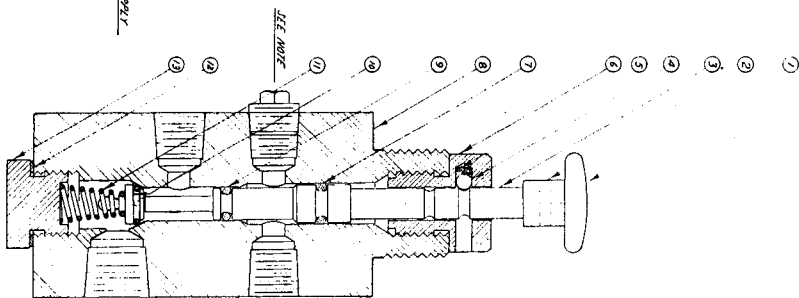

PURGE POSITION
(GAUGE NOT CLOSED)

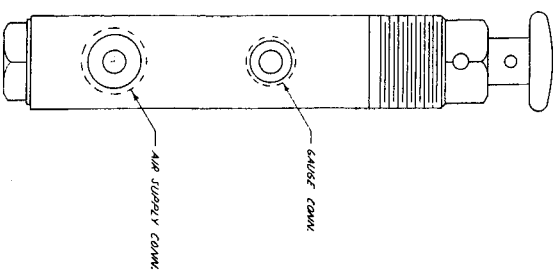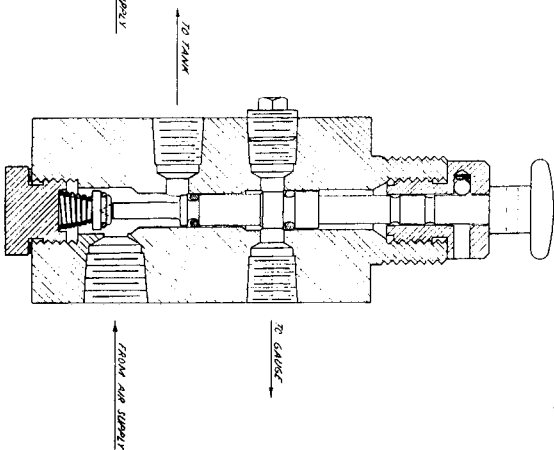

NOTE
NEUTRAL POSITION ALSO USED
FOR GAUGE CALIBRATION

ITEM	DESCRIPTION
1	SPRING PIN
2	SPRING PIN
3	STEEL BALL
4	STEEL BALL
5	STEEL BALL
6	STEEL BALL
7	O-RING
8	O-RING
9	O-RING
10	ROCKET ASSEMBLY
11	VALVE STEM JOINT
12	WALNUT
13	JANING REMOVER

OPERATIONAL MANUAL OF
MANUAL PURGE VALVE
E-3770