


### Flange Fitting Adapter

Adapter has flat faced 150-class ANSI pipe flange. Seal gasket and fastener hardware to be supplied by others.

1. Align adapter flange and mating flange (gasket seal not supplied).
2. Install fasteners (not supplied) and alternatively tighten at opposing positions on bolt circle to apply even sealing pressure at flange junction.
3. Actual torque requirements will depend upon type of gasket seal used.

Shell Seal Plug Assembly No. 2584-3 can be used to cap end of adapter fitting when the level sensor has been removed or prior to sensor installation.

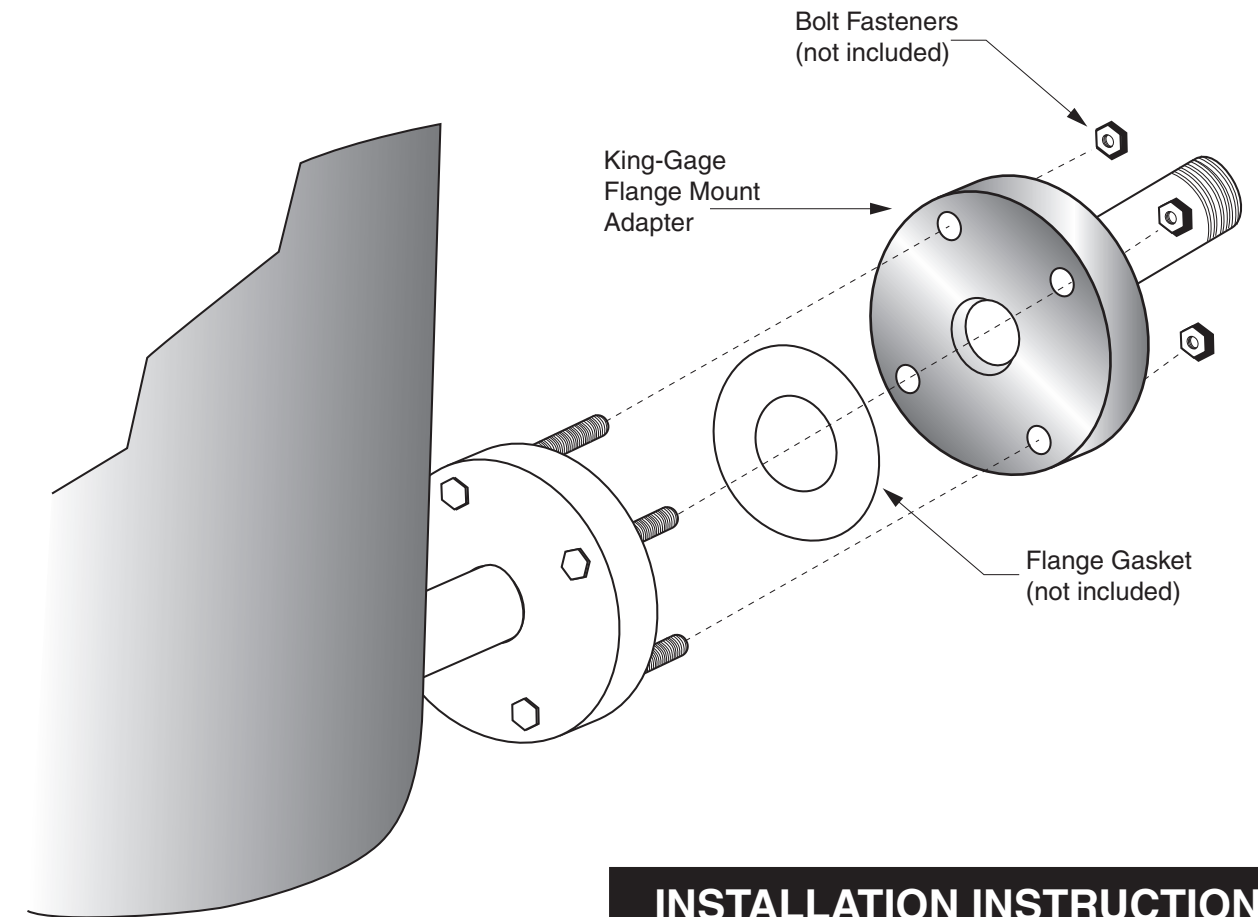

### INSTALLATION INSTRUCTIONS

## 316L Stainless Steel Flange Fitting Adapter for KING-GAGE® Level Sensors

			DATE	10 July 07
B	7/07	Part Numbers & Flange Dimensions	DRAWN BY	H. Emrick
A	3/96	Released	APPROVED	JGWLS



DWG. NO.	K-1060-1-5627
SHEET 1 of 1	REV. B