

**DIAPHRAGM
CARTRIDGE
159-0179**

**DIAPHRAGM
CARTRIDGE
159-0179**

**DIAPHRAGM
CARTRIDGE
159-0179**

**DIAPHRAGM
CARTRIDGE
159-0179**

**DIAPHRAGM
CARTRIDGE
159-0179**

**DIAPHRAGM
CARTRIDGE
159-0179**

**DIAPHRAGM
CARTRIDGE
159-0179**

**DIAPHRAGM
CARTRIDGE
159-0179**

**DIAPHRAGM
CARTRIDGE
159-0179**

**DIAPHRAGM
CARTRIDGE
159-0179**

<p>159-0179 DIAPHRAGM CARTRIDGE INSTRUCTION SHEET</p> <ol style="list-style-type: none"> 1 UNTHREAD ADAPTER FROM TRANSMITTER ASSEMBLY. CHECK O-RINGS FOR PROPER PLACEMENT (SEE ILLUSTRATION). 2 REMOVE DIAPHRAGM CARTRIDGE FROM ITS CONTAINER AND INSTALL ON STEM OF TRANSMITTER ASSEMBLY. CAUTION: DO NOT PRESS ON FACE OF DIAPHRAGM — GRASP THE SIDES OF THE CARTRIDGE. 3 INSTALL ADAPTER OVER DIAPHRAGM CARTRIDGE AND TIGHTEN FIRMLY (USE SPANNER WRENCH) UNTIL O-RING ON CARTRIDGE IS EVENLY EXTRUDED. 4 INSERT TRANSMITTER ASSEMBLY IN TANK SHELL AND REPLACE SHELL NUT. TIGHTEN NUT FIRMLY UNTIL ADAPTER O-RING IS EVENLY EXTRUDED AT TANK INTERFACE. 	<p>EX-1632-1</p>
---	------------------

<p>159-0179 DIAPHRAGM CARTRIDGE INSTRUCTION SHEET</p> <ol style="list-style-type: none"> 1 UNTHREAD ADAPTER FROM TRANSMITTER ASSEMBLY. CHECK O-RINGS FOR PROPER PLACEMENT (SEE ILLUSTRATION). 2 REMOVE DIAPHRAGM CARTRIDGE FROM ITS CONTAINER AND INSTALL ON STEM OF TRANSMITTER ASSEMBLY. CAUTION: DO NOT PRESS ON FACE OF DIAPHRAGM — GRASP THE SIDES OF THE CARTRIDGE. 3 INSTALL ADAPTER OVER DIAPHRAGM CARTRIDGE AND TIGHTEN FIRMLY (USE SPANNER WRENCH) UNTIL O-RING ON CARTRIDGE IS EVENLY EXTRUDED. 4 INSERT TRANSMITTER ASSEMBLY IN TANK SHELL AND REPLACE SHELL NUT. TIGHTEN NUT FIRMLY UNTIL ADAPTER O-RING IS EVENLY EXTRUDED AT TANK INTERFACE. 	<p>EX-1632-1</p>
---	------------------

<p>159-0179 DIAPHRAGM CARTRIDGE INSTRUCTION SHEET</p> <ol style="list-style-type: none"> 1 UNTHREAD ADAPTER FROM TRANSMITTER ASSEMBLY. CHECK O-RINGS FOR PROPER PLACEMENT (SEE ILLUSTRATION). 2 REMOVE DIAPHRAGM CARTRIDGE FROM ITS CONTAINER AND INSTALL ON STEM OF TRANSMITTER ASSEMBLY. CAUTION: DO NOT PRESS ON FACE OF DIAPHRAGM — GRASP THE SIDES OF THE CARTRIDGE. 3 INSTALL ADAPTER OVER DIAPHRAGM CARTRIDGE AND TIGHTEN FIRMLY (USE SPANNER WRENCH) UNTIL O-RING ON CARTRIDGE IS EVENLY EXTRUDED. 4 INSERT TRANSMITTER ASSEMBLY IN TANK SHELL AND REPLACE SHELL NUT. TIGHTEN NUT FIRMLY UNTIL ADAPTER O-RING IS EVENLY EXTRUDED AT TANK INTERFACE. 	<p>EX-1632-1</p>
---	------------------

<p>159-0179 DIAPHRAGM CARTRIDGE INSTRUCTION SHEET</p> <ol style="list-style-type: none"> 1 UNTHREAD ADAPTER FROM TRANSMITTER ASSEMBLY. CHECK O-RINGS FOR PROPER PLACEMENT (SEE ILLUSTRATION). 2 REMOVE DIAPHRAGM CARTRIDGE FROM ITS CONTAINER AND INSTALL ON STEM OF TRANSMITTER ASSEMBLY. CAUTION: DO NOT PRESS ON FACE OF DIAPHRAGM — GRASP THE SIDES OF THE CARTRIDGE. 3 INSTALL ADAPTER OVER DIAPHRAGM CARTRIDGE AND TIGHTEN FIRMLY (USE SPANNER WRENCH) UNTIL O-RING ON CARTRIDGE IS EVENLY EXTRUDED. 4 INSERT TRANSMITTER ASSEMBLY IN TANK SHELL AND REPLACE SHELL NUT. TIGHTEN NUT FIRMLY UNTIL ADAPTER O-RING IS EVENLY EXTRUDED AT TANK INTERFACE. 	<p>EX-1632-1</p>
---	------------------

<p>159-0179 DIAPHRAGM CARTRIDGE INSTRUCTION SHEET</p> <ol style="list-style-type: none"> 1 UNTHREAD ADAPTER FROM TRANSMITTER ASSEMBLY. CHECK O-RINGS FOR PROPER PLACEMENT (SEE ILLUSTRATION). 2 REMOVE DIAPHRAGM CARTRIDGE FROM ITS CONTAINER AND INSTALL ON STEM OF TRANSMITTER ASSEMBLY. CAUTION: DO NOT PRESS ON FACE OF DIAPHRAGM — GRASP THE SIDES OF THE CARTRIDGE. 3 INSTALL ADAPTER OVER DIAPHRAGM CARTRIDGE AND TIGHTEN FIRMLY (USE SPANNER WRENCH) UNTIL O-RING ON CARTRIDGE IS EVENLY EXTRUDED. 4 INSERT TRANSMITTER ASSEMBLY IN TANK SHELL AND REPLACE SHELL NUT. TIGHTEN NUT FIRMLY UNTIL ADAPTER O-RING IS EVENLY EXTRUDED AT TANK INTERFACE. 	<p>EX-1632-1</p>
---	------------------